


BannerBug®

RETRACTABLE BANNER STAND



RE-TENSIONING INSTRUCTIONS

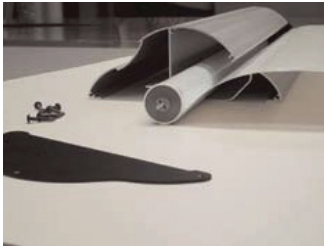

1. With the system facing you, remove the left hand end cap using a Phillips head screwdriver to expose the reel (with leader strip protruding out of the system).

WARNING:

Take care when removing the end cap. The reel may not be completely unwound and may cause the end cap to spin quickly.



2. Place the pin into the right-hand end cap. Rotate the reel until the hole in the reel lines up with the hole in the end cap. Place the Allen key to stop the reel from rotating.



3. Position the left-hand end plate onto the system so that the flat metal bar of the reel protrudes from the slot in the end cap. Grip the flat bar with a vice grip.



4. Rotate the flat bar clockwise. The table above indicates the number of rotations required for different size BannerBug® models.



5. Replace the screws in the left-hand end cap.

Model	Size	# of Turns
Desk Bug	8.69" (220mm)	7
Baby Bug	22.81" (580mm)	15
33" Bug	33.44" (850mm)	21
39" Bug	39.375" (1000mm)	22
47" Bug	47.25" (1200mm)	23
59" Bug	59.17" (1500mm)	30
72" Bug	72.75 (1800mm)	30
Giant Bug	39.375" (1000mm)	25

Canada

105 Nuggett Court,
Brampton,
Ontario, L6T 5A9,
Canada
toronto@drytac.com
Tel: +1 800.353.2883

USA

5601 Eastport Boulevard,
Richmond,
Virginia, 23231,
USA
customerservice@drytac.com
Tel: +1 800.280.6013

DRYTAC®

www.drytac.com