


# 1




Lay graphic facedown and unroll.

# 2

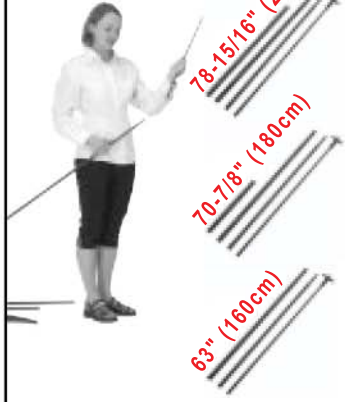


Connect pole segments to attain required unit height.

# 3

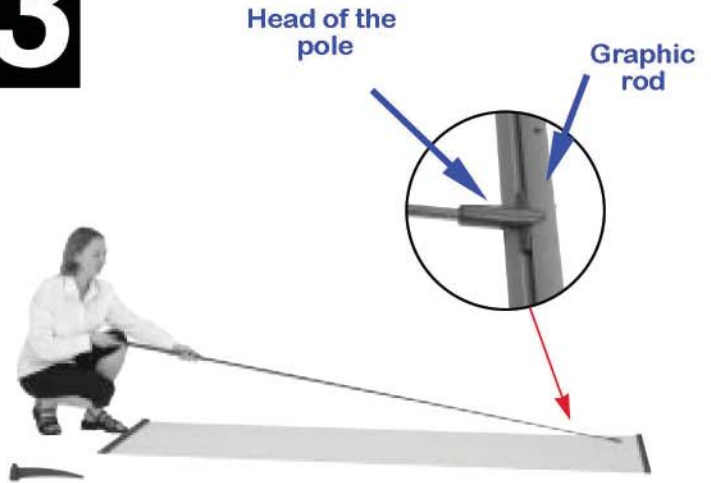


While standing at the bottom of the graphic, insert the head of the pole into the groove of the top graphic rod.

# 4

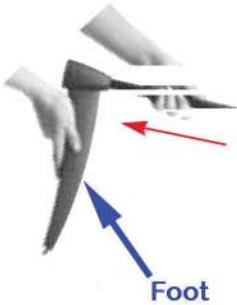

Slide the foot onto the base of the pole.

# 5

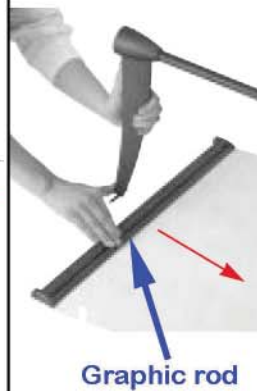

Arc the pole slightly.

# 6



Insert the tip of the foot into the groove of the bottom graphic rod.

# 7



Lift the unit from the top.

# DRYTAC®

# DRYTAC